



COMPATIBILITY: QTV 050
IRV / VLV 051
NI 052
DA 054
FBLV 054
FCMV 055
FMEV 057

058
112
116
117
118
119
150

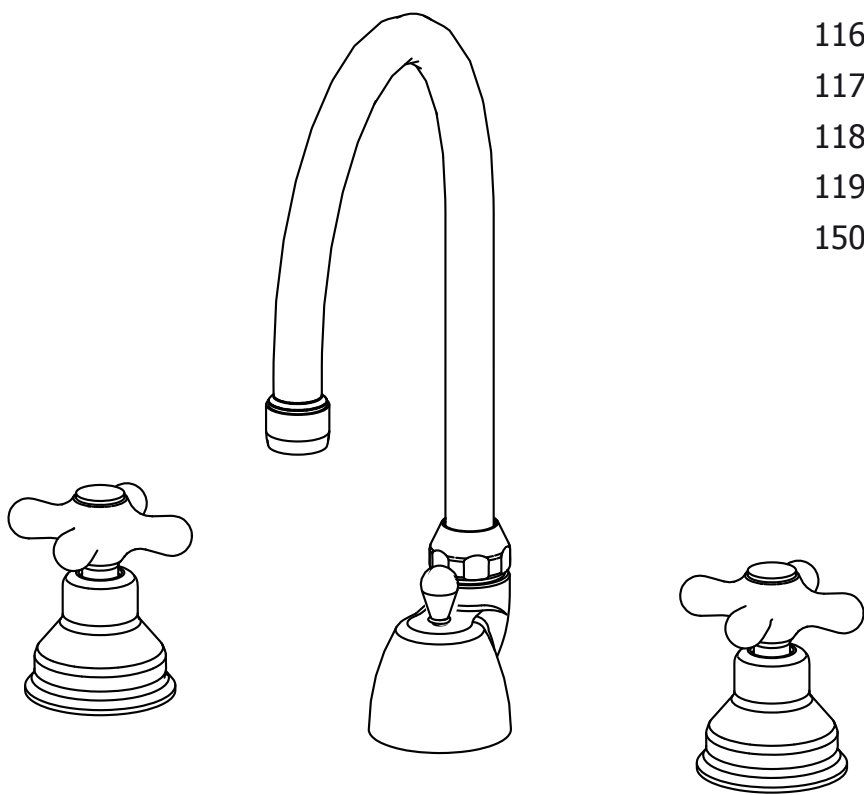


1


Montaggio Assembly

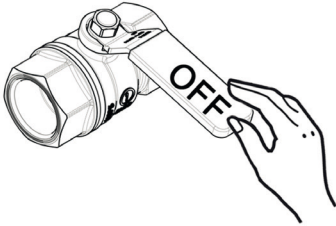

65°C MAX



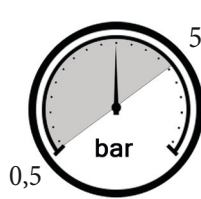


MIN - MAX


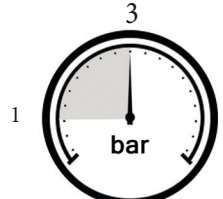


OK

2

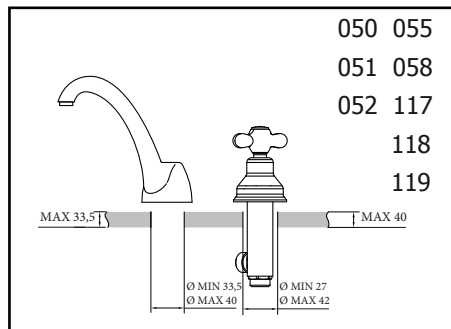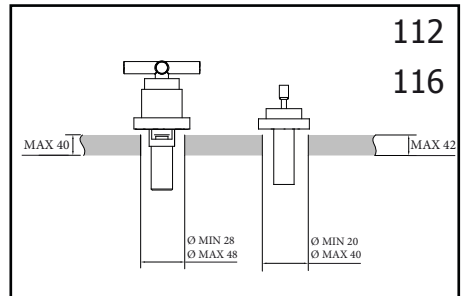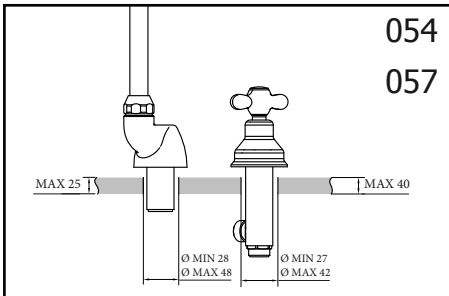

3

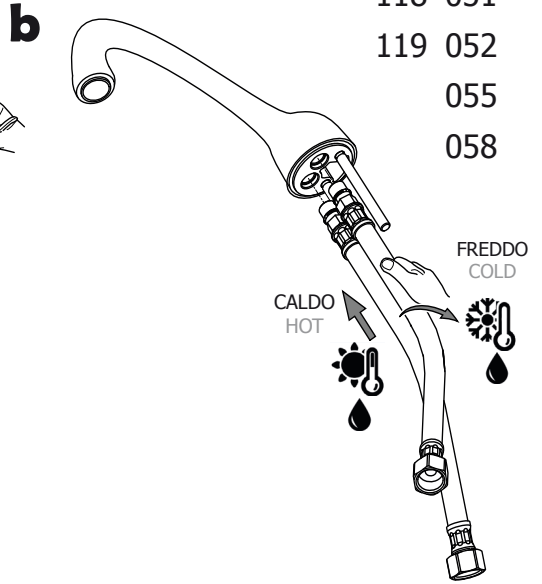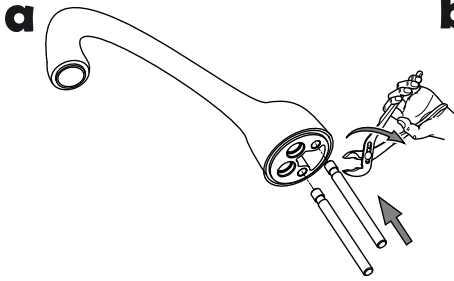

117 050



118 051

119 052

055

058

4

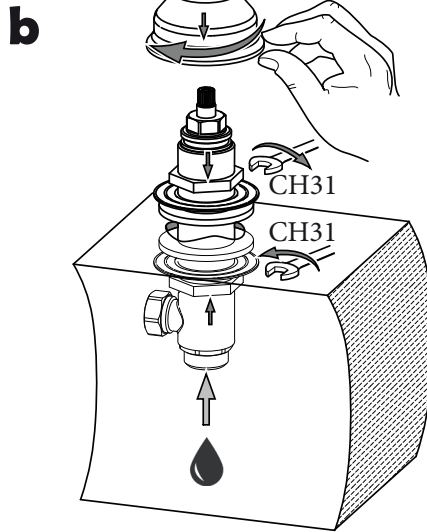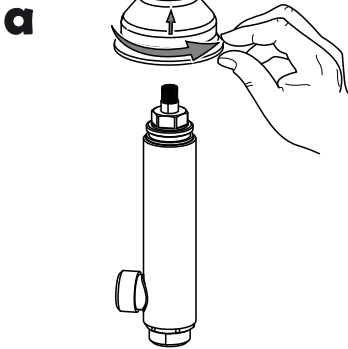

050

051

052

054

055

057

058


117

118

119

5

a

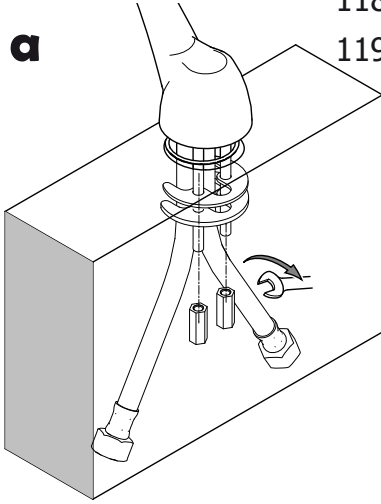

117 050

118 051


119 052

055

058


150

b

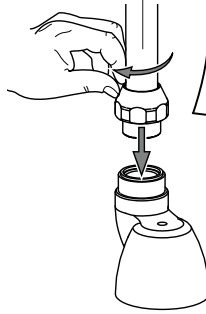


054


057

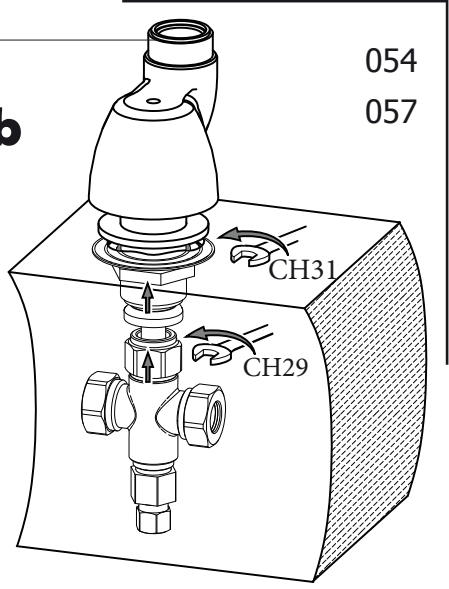


a

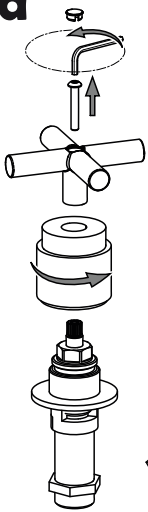


b

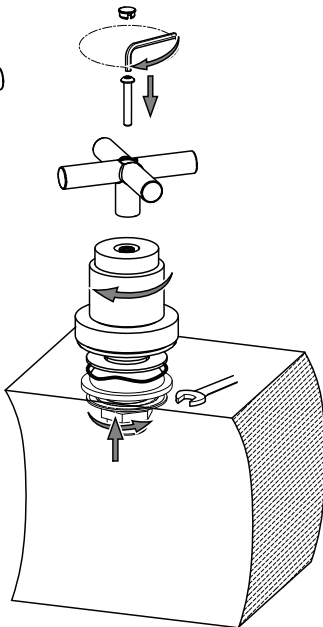

c

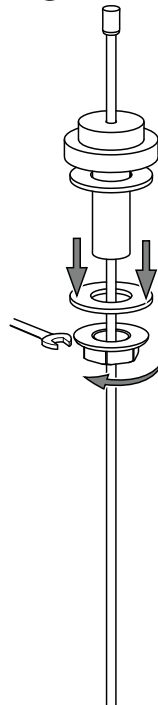

d

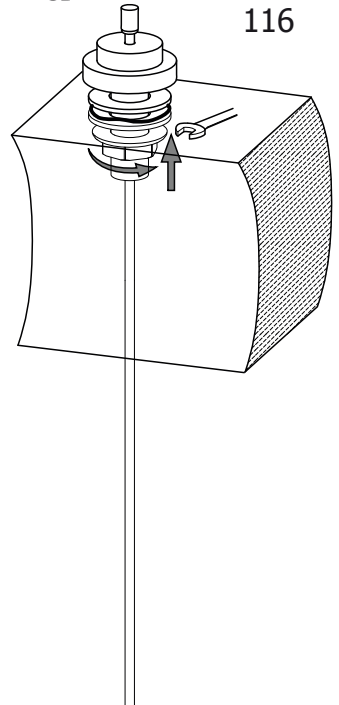




112

116

C Collegamenti Connection

054

057

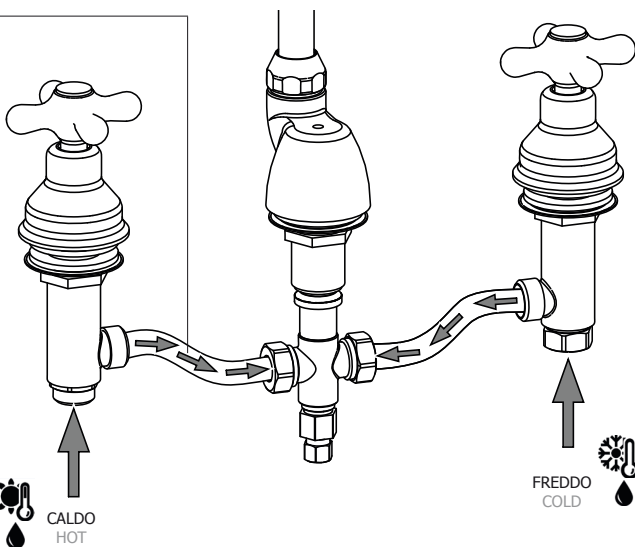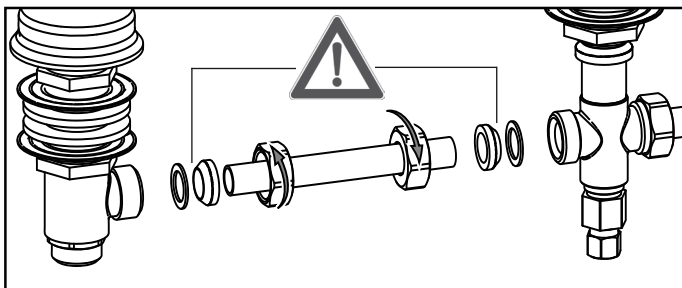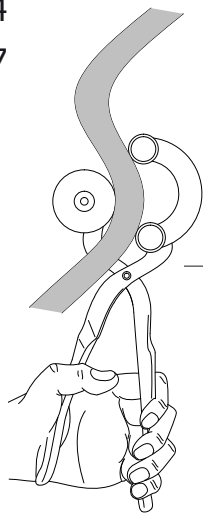

050

051

052


055

058

117


118

119

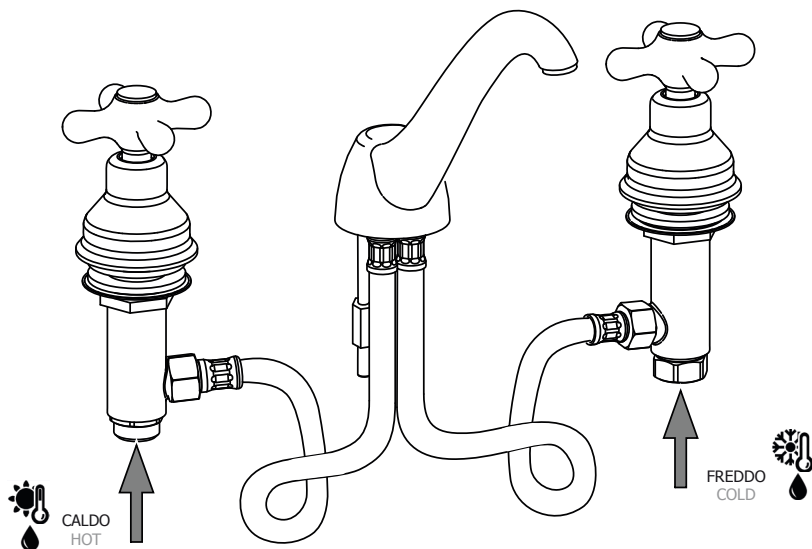


6

057
058
050
055
112
116
117
118
119

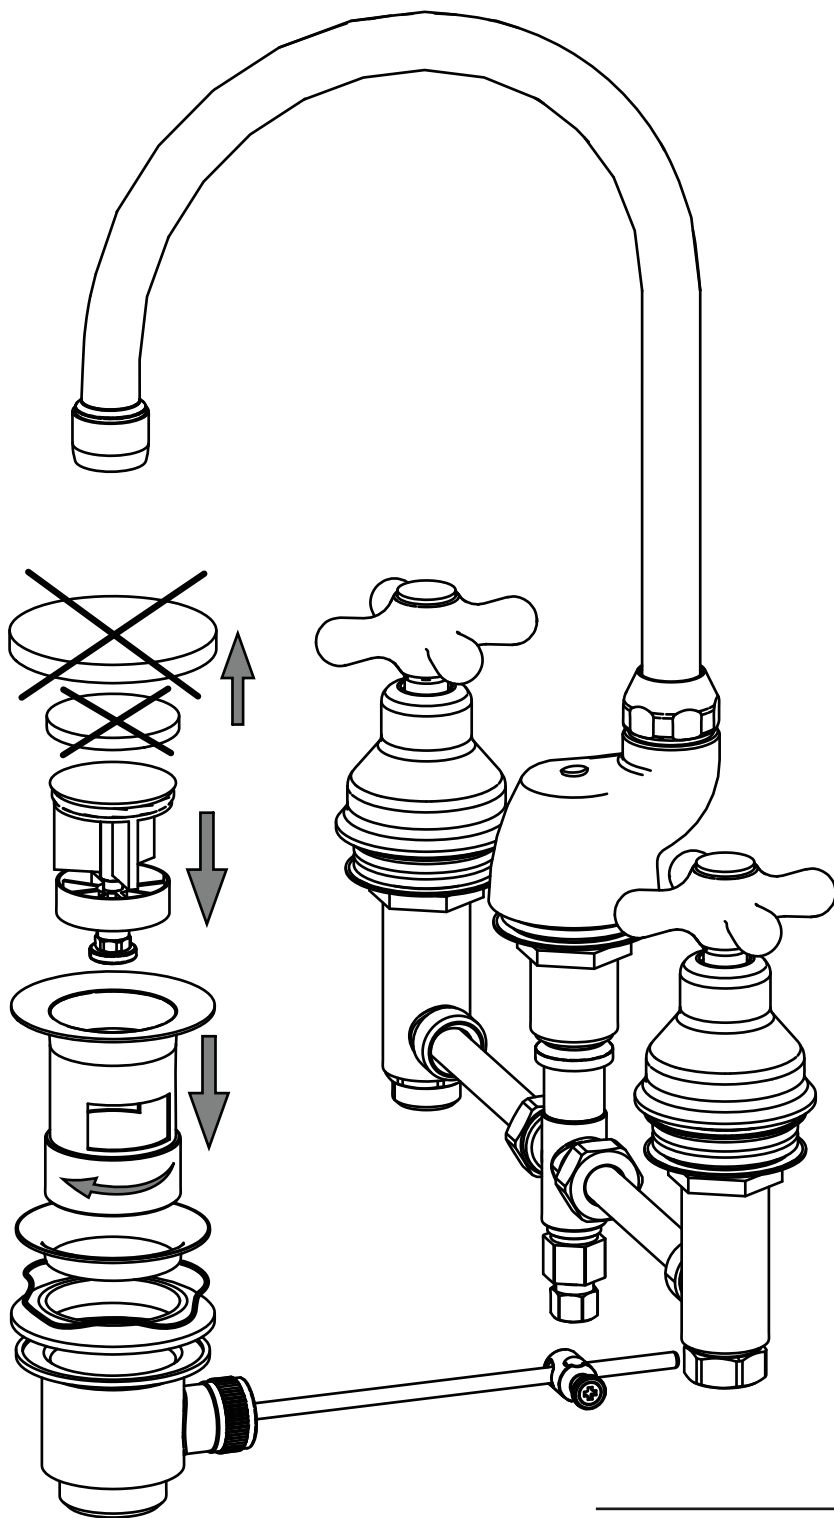


7

057
058
050
055
112
116
117
118
119

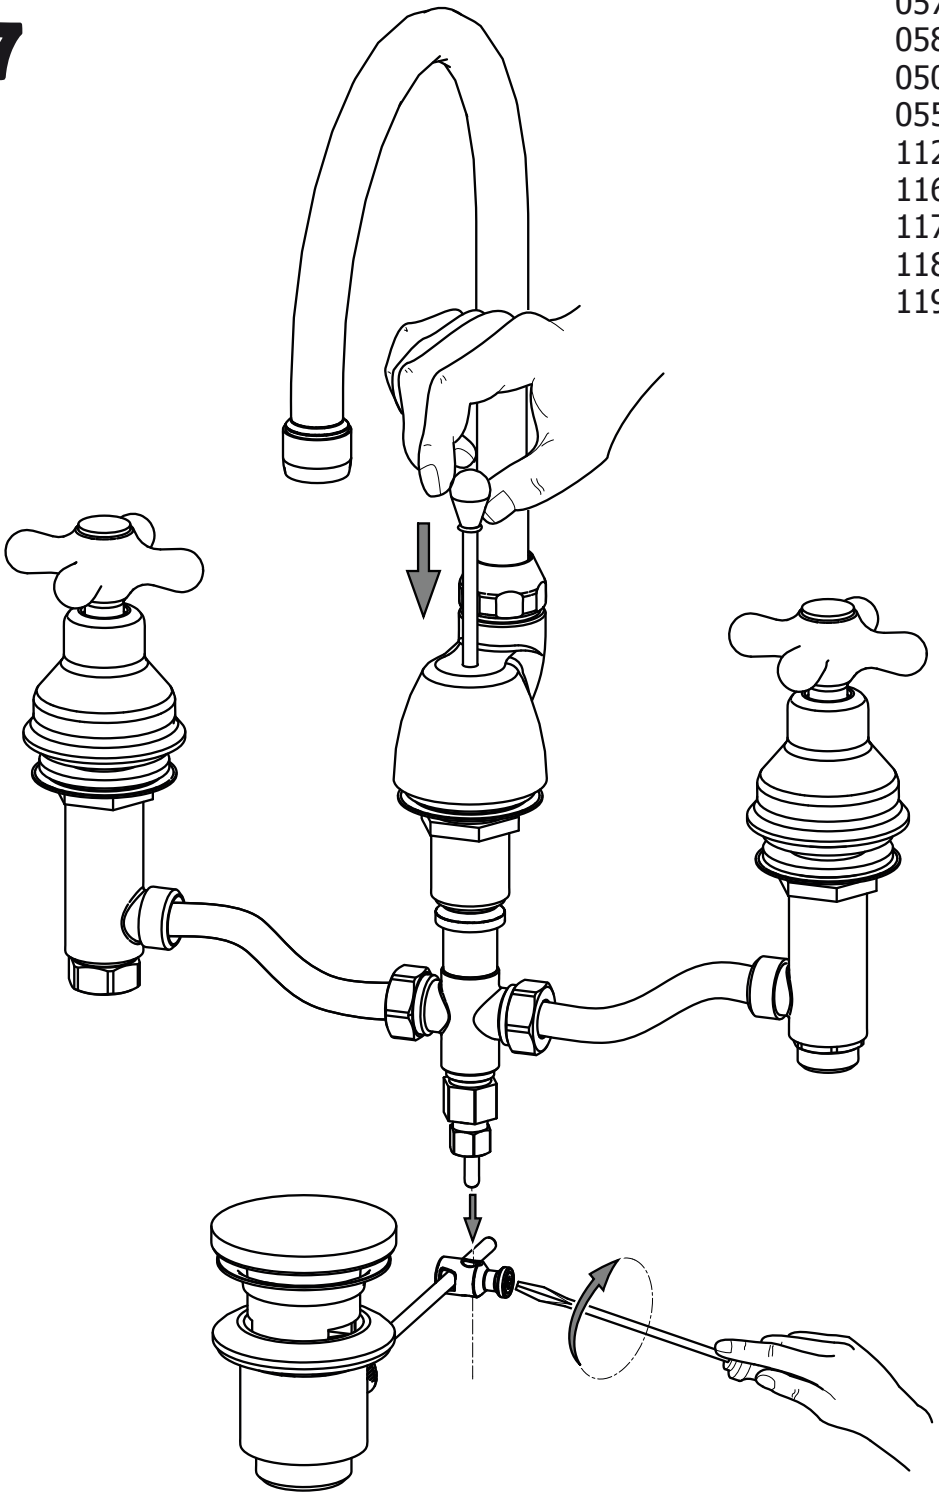


M Manutenzione Service

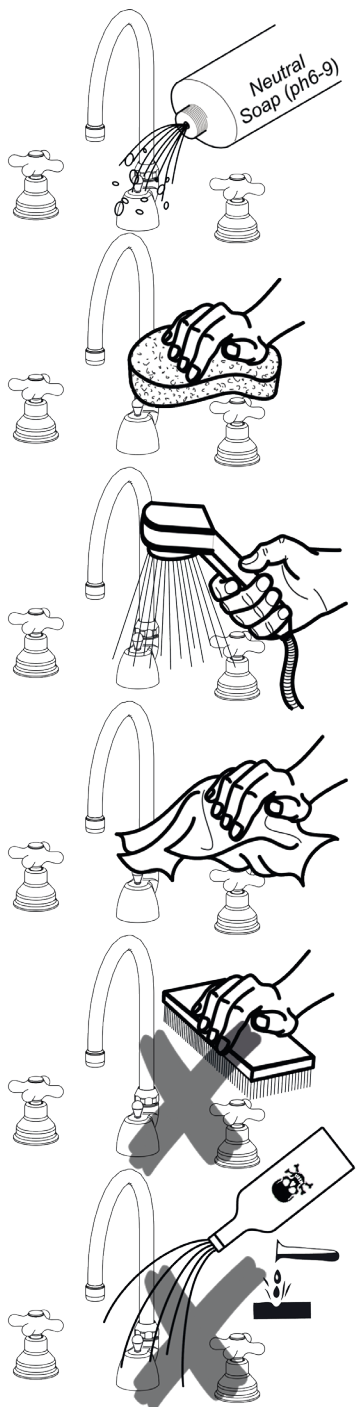


S Sostituzione Vitone Ceramico How to replace Ceramic Disc Valve

a

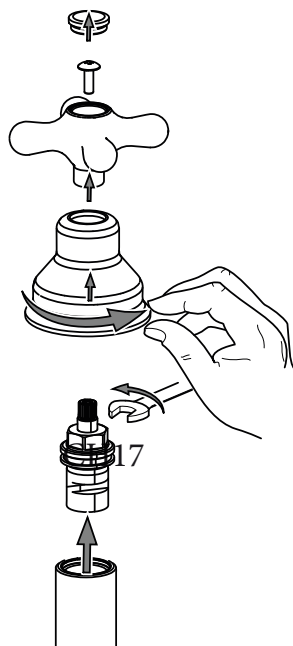

b Sostituzione Snodo How to replace Joint

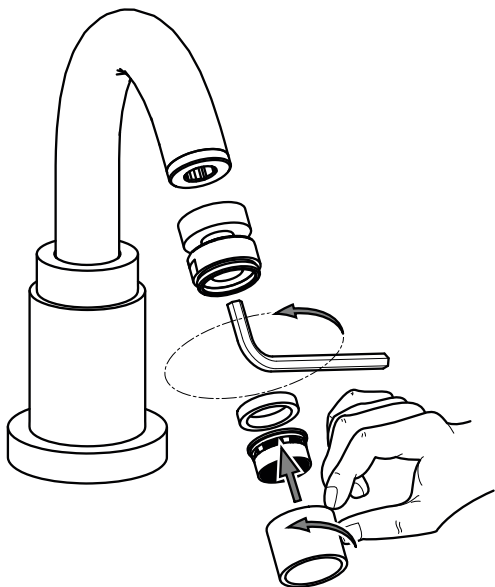

c Sostituzione Aeratore How to replace Aerator